



INSTRUCTION MANUAL MULTISPORT TABLETOP SCOREBOARD MODEL LED-3



SERIAL NUMBER: _____



Please read this instruction manual carefully and completely. Important information concerning the safe operation of your scoreboard is contained within it. A thorough understanding of the information contained in this manual is essential to ensure the successful operation, long life, and warranty protection of your scoreboard. It is recommended that one individual in your organization be given responsibility for the operation and maintenance of the scoreboard. Scoring duties may be delegated to others after they receive an orientation from the responsible party.

SPORTABLE SCOREBOARDS®

REV. 04/00
9200118
LED-3

Table of Contents

Getting Started	2
Keypad Definitions and Key Functions	2
Changing Game Modes	3
Clock Operation	3
Basketball	4
Volleyball	4
Wrestling	5
Track	5
Timed Workout	6
Time of Day Mode	6
Technical Support	7
Two (2) Year Limited Warranty	7

It is our goal to ensure your complete satisfaction with our products and services.

Most, if not all of the answers to your questions about the operation and maintenance of your scoreboard will be found in this manual. If you still have questions after reading this manual thoroughly, please call our Technical Support Department, available 24 hours a day, 7 days a week, at 1-800-411-3136.

S'PORTABLE SCOREBOARD products are manufactured by:

S'PORTABLE SCOREBOARDS, INC.

P.O. Box 1480

106 Max Hurt Drive

Murray, KY 42071

We may be reached at the following numbers:

OFFICE: (270) 759-1600

OFFICE FAX: (270) 759-0066

SALES: (800) 323-7745

SALES FAX: (270) 759-4112

TECHNICAL SUPPORT: (800) 411-3136

WEB SITE: www.sportablescoreboards.com

E-MAIL: sales@sportablescoreboards.com

Turning the LED-3 ON and OFF

NOTE: For convenience and ease of operation, the scoreboard does not have an *ON/OFF* switch. To turn the unit *ON*, supply power to the scoreboard according to the instructions below. To turn the unit *OFF*, simply unplug the scoreboard from the wall.

To supply power to the scoreboard:

1. Plug the appropriate end of the supplied DC wall transformer into the power receptacle on the side of the scoreboard. See Figure 2-1 below.
2. Plug the wall transformer into a standard, 120-volt AC outlet. See Figure 2-1 below.


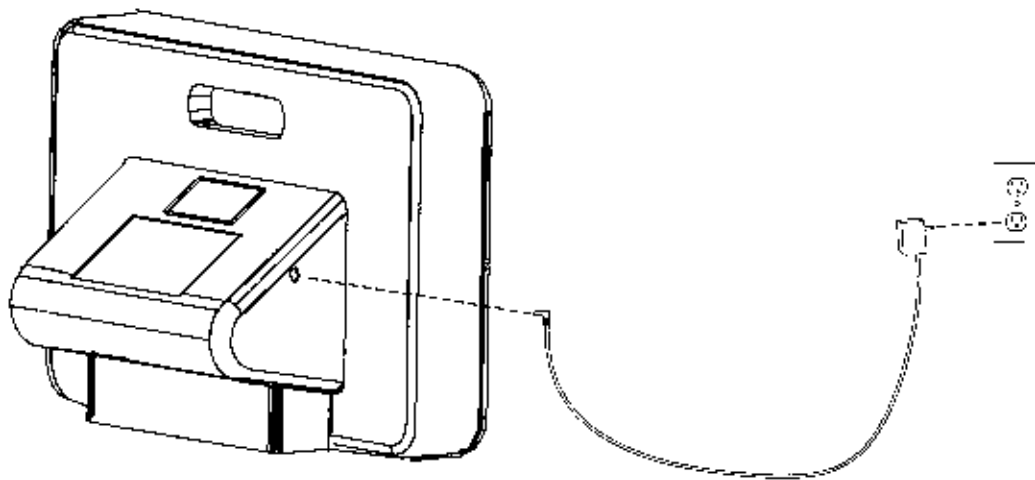


Figure 2-1

Keypad Definitions and Key Functions

- SET CLOCK**
WITH THE CLOCK STOPPED, PRESS AND HOLD THIS KEY FOR 3 SECONDS TO CHANGE THE TIME THAT IS SAVED IN MEMORY.
- 1 MIN**
WITH THE CLOCK STOPPED, PRESS THIS KEY ONCE TO SUBTRACT 1 MINUTE FROM THE CLOCK.
- 1 SEC**
WITH THE CLOCK STOPPED, PRESS THIS KEY ONCE TO SUBTRACT 1 SECOND FROM THE CLOCK.
- 1 HOME**
PRESS THIS KEY ONCE TO SUBTRACT 1 POINT FROM THE HOME SCORE.
- 1 GUEST**
PRESS THIS KEY ONCE TO SUBTRACT 1 POINT FROM THE GUEST SCORE.

POSSESSION INDICATOR

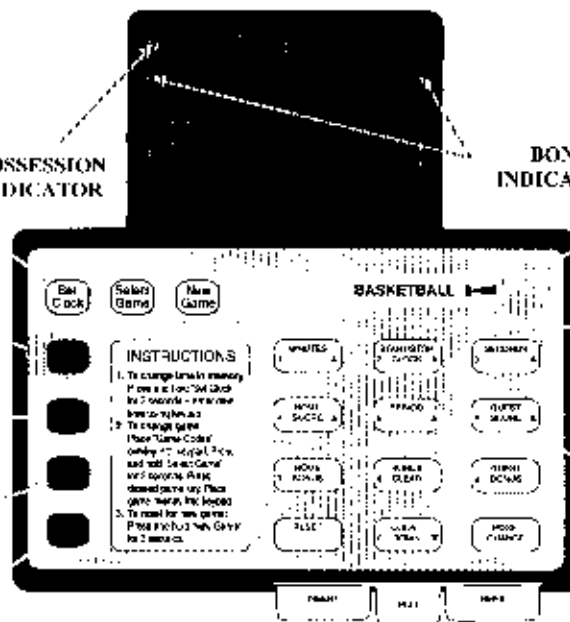

BONUS INDICATORS

HORN
PRESS THIS KEY AT ANY TIME TO SOUND THE HORN.

NEW GAME
WITH THE CLOCK STOPPED, PRESS AND HOLD THIS KEY FOR 3 SECONDS TO RESET THE SCOREBOARD FOR A NEW GAME.

SELECT GAME
WITH THE CLOCK STOPPED, INSERT THE GAME CODE, KEYPAD INSERT AND PRESS AND HOLD THIS KEY FOR 3 SECONDS TO CHANGE GAME MODES.

KEYPAD INSERT

Changing Game Modes

To change game modes:

1. Place the **GAME CODES** keypad insert into the keypad.
2. Press and hold the **SELECT GAME** key for three seconds.
3. When the display clears, press the key for the mode you wish to change to. The corresponding keypad number for the game you selected will appear briefly in the **HOME SCORE** area of the display.
4. Remove the **GAME CODES** keypad insert and insert the keypad insert for the game you selected.

Clock Operation

To set the clock:

1. Press and hold the **SET CLOCK** key for three seconds.
2. When the display clears, use the numeric keypad to enter the desired period time in minutes and seconds in a four-digit format. For example, to enter a time of 6:00, press 0, 6, 0, 0. To enter a time of 12:00, press 1, 2, 0, 0.

Clock Operation:

- To start the clock, press the **START/STOP CLOCK** key.
- To stop the clock, press the **START/STOP CLOCK** key.
- To add minutes to the clock press the **MINUTES** key.
- To add seconds to the clock press the **SECONDS** key.
- To subtract minutes from the clock press the **-1 MIN** key.
- To subtract seconds from the clock press the **-1 SEC** key.

NOTE: The clock must be stopped in order to add or subtract minutes or seconds.

Basketball

- To increase the *HOME* score by 1, press the **HOME SCORE** key.
- To increase the *GUEST* score by 1, press the **GUEST SCORE** key.
- To decrease the *HOME* score by 1, press the **-1 HOME** key.
- To decrease the *GUEST* score by 1, press the **-1 GUEST** key.
- To increase the *PERIOD*, press the **PERIOD** key.
- To indicate a Home *BONUS*, press the **HOME BONUS** key.
- To indicate a Guest *BONUS*, press the **GUEST BONUS** key.
- To clear both the Home and Guest *BONUS* displays, press the **BONUS CLEAR** key.
- To change the *POSSESSION* arrow from the Home team to the Guest team or vice versa, press the **POSS. CHANGE** key.
- To sound the *HORN* at any time, press the **HORN** key located at the top of the keypad.

Volleyball

- To increase the *HOME* score by 1, press the **HOME SCORE** key.
- To increase the *GUEST* score by 1, press the **GUEST SCORE** key.
- To decrease the *HOME* score by 1, press the **-1 HOME** key.
- To decrease the *GUEST* score by 1, press the **-1 GUEST** key.
- To increase *HOME GAMES WON* by 1, press the **HOME GAMES WON** key.
- To increase *GUEST GAMES WON* by 1, press the **GUEST GAMES WON** key.
- To change the *SERVER* arrow, press the **SERVER** key.